

# Instruction Booklet for GETEC Hydra-Max Hydraulic Generators

Model \_400+401 \_\_\_\_\_ GPM \_\_\_\_\_ 8.5 \_\_\_\_ PSI \_2000 \_\_\_\_





Telephone : (845) 292-0800 FAX # : (845)-292-0830

### Hydro-Max Theory and Operation

The Hydro-Max hydraulic generator is a hydraulically-powered alternating current (AC) generator. With the minimum recommended flow passing through the motor, the generator is spinning at 3720 and produces 110 Volt AC at 62 Hz. As the load is supplied to the generator, the voltage will increase to 120 Volt and the frequency will stabilize at 60 Hz (3600 RPM). The voltage is maintained via a capacitor (voltage regulator). The precise mF the capacitor is matched at the time of manufacture of the generator. Should the generator drop below 3000 RPM, the voltage will also drop at a very steep curve. Changing the mF of the capacitor will also vary the voltage.

The built-in flow control on the motor will maintain the generator's speed as long as the flow does not drop below the recommended minimum or exceed the maximum allowed flow. If the temperature of the hydraulic oil exceeds 160 F, some slippage will occur and the generator will not be able to maintain its proper speed. The standard voltage is set up for 120 volts but can very easily be changed by the customer as needed.



# Important Hydraulic Circuit Installation Information

If the hydraulically-driven welder/generator or generator is mounted below the system tank, it is highly recommended that a check valve with a very low cracking pressure is installed in the case drain line (free flow motor to tank, blocking tank to motor). This will eliminate seal leakage during non-use time. It is also recommended that the case drain be connected directly to the top of the tank and not through a cooler or filter.





## Hydro-Max<sup>TM</sup> General Installation

The Hydro-Max<sup>TM</sup> is a hydraulically-driven AC generator that will deliver its rated output power when the proper flow at 2000 PSI is connected to its hydraulic drive. Oil temperature should be between 100-140° F. A 10 micron filter is also recommended to maintain the drive at its maximum performance. Depending on the size of the reservoir, an oil cooler must be used; the smaller the reservoir, the larger the cooler.

The tank should **NEVER** be smaller than 2 times the required GPM.

When starting a new hydraulic system, we strongly recommend that you connect the pressure line to the return line, bypassing the hydraulic generator drive. Operate the system for 10 minutes that way. This will clean the system; otherwise all kinds of problems will occur. After connecting the pressure and return line to the generator's hydraulic drive, start your system at a low speed, slowly increasing the speed until you reached the proper operating speed. While setting up a hydraulically-driven generator, it is necessary to check the speed setting of the hydraulic drive, since most systems will vary in many ways (temperature - flow - viscosity/type of oil - etc.) from our test set up.


**NEVER** allow the generator to exceed 3900 RPM.

The return line pressure, under no circumstances, should reach 100 PSI or seal-failure will occur.

The case drain must be connected <u>directly</u> to the tank (do **NOT** connect to return line). Return line must be 3/4 or larger.

Telephone: (914)-292-0800

FAX # : (914)-292-0830

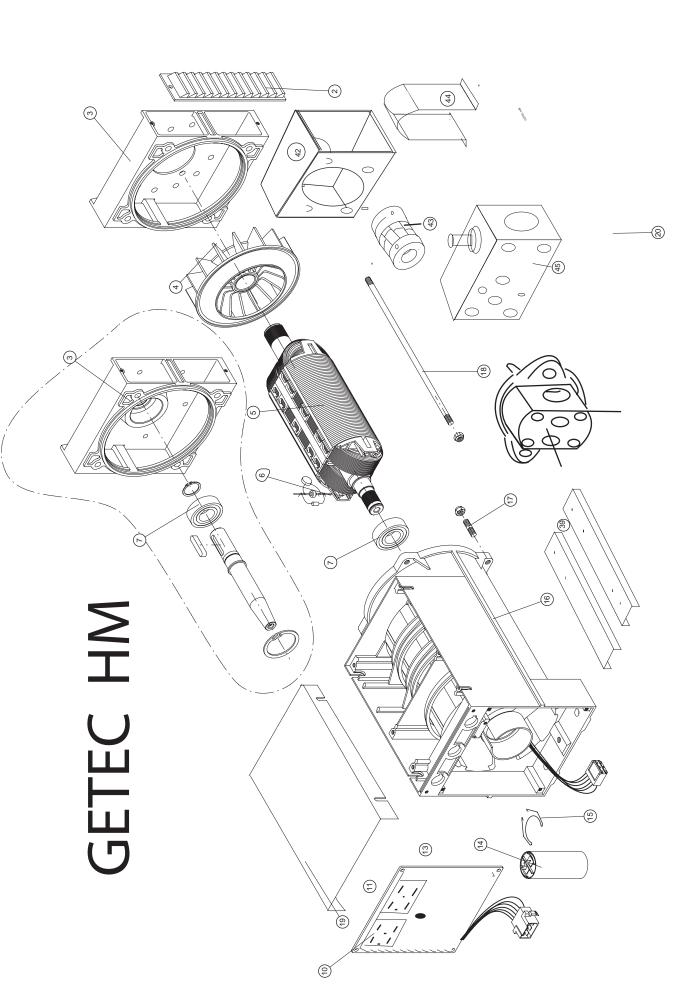





### GETEC Series 100 Parts List HYDROMAX Page 1 of 2

Item #	GETEC#	Description	Price
2	600869	Front Grid	
3	600872	Front Shield B3-B14	
4a	600873	Fan	
4b	600874	Fan with hole for (35)J609B	
5a	600875	Rotor E100 3.7	
5b	600876	Rotor E100 5.2	
5c	600877	Rotor E100 6.2	
5d	600878	Rotor E100 7.5	
5e	600879	Rotor E100 8.8	
5f	600880	Rotor E100 10.0	
6	600881	Diode & Varistor & EMC Capacitor	
7	600882	Bearing	
10	600887	Recepticle Panel	
14a	600892	Capacitor 20uF 450	
14b	600893	Capacitor 25uF 450	
14c	600894	Capacitor 30uF 450	
14d	600895	Capacitor 40uF 450	
15	600896	Capacitor block spring	
16a	600897	Housing M & Stat. E100 3.7 120/240 V	
16b	600898	Housing M & Stat. E100 5.2 120/240 V	
16c	600899	Housing M & Stat. E100 6.2 120/240 V	
16d	600900	Housing L & Stat. E100 7.5 120/240 V	
16e	600901	Housing L & Stat. E100 8.8 120/240 V	

GETEC. COM

Telephone: (845)-292-0800 FAX #: (845)-292-0830






### GETEC Series 100 Parts List HYDROMAX Page 2 of 2


Item#	GETEC#	Description	Price
16f	600902	Housing L & Stat. E100 10.0 120/240 V	
17	600903	Bolt – M8 * 30	
18	600904	Shaft bolt	
19a	600905	Black top cover	
20	600868	KIT: from J609B to B3/B14	
39	600674	Rails Set	
42	601111	Motor Mount AA-4	
42a	600970	Motor Mount A-2	
43	600971	Coupling Set 99	
43a	601109	Coupling Set 95	
44	600114	Coupling Cover	
45	601112	Flow Control Assembly Sun	
45a	600922	Flow Control Assembly Int.	
46	601115	Hydraulic Motor (3)	
46a	601115	Hydraulic Motor (3.6) -98	
46b	601116	Hydraulic Motor (4) -99	
46c	601114	Hydraulic Motor (4.8) 09	
46d	600975	Hydraulic Motor (6.2) 12	
46e	600996	Hydraulic Motor (7.5) 15	
46f	601113	Hydraulic Motor (8.5) 17	
46g	600972	Hydraulic Motor (10) 19	

GETEC. COM

Telephone: (845)-292-0800 FAX #: (845)-292-0830

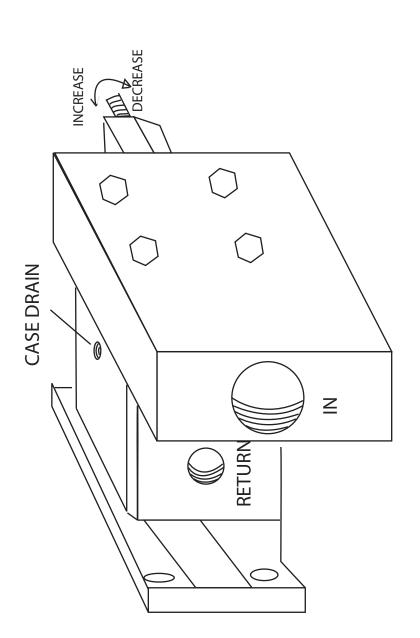

## 300-360 YDR.DRIVE 400 Mode and

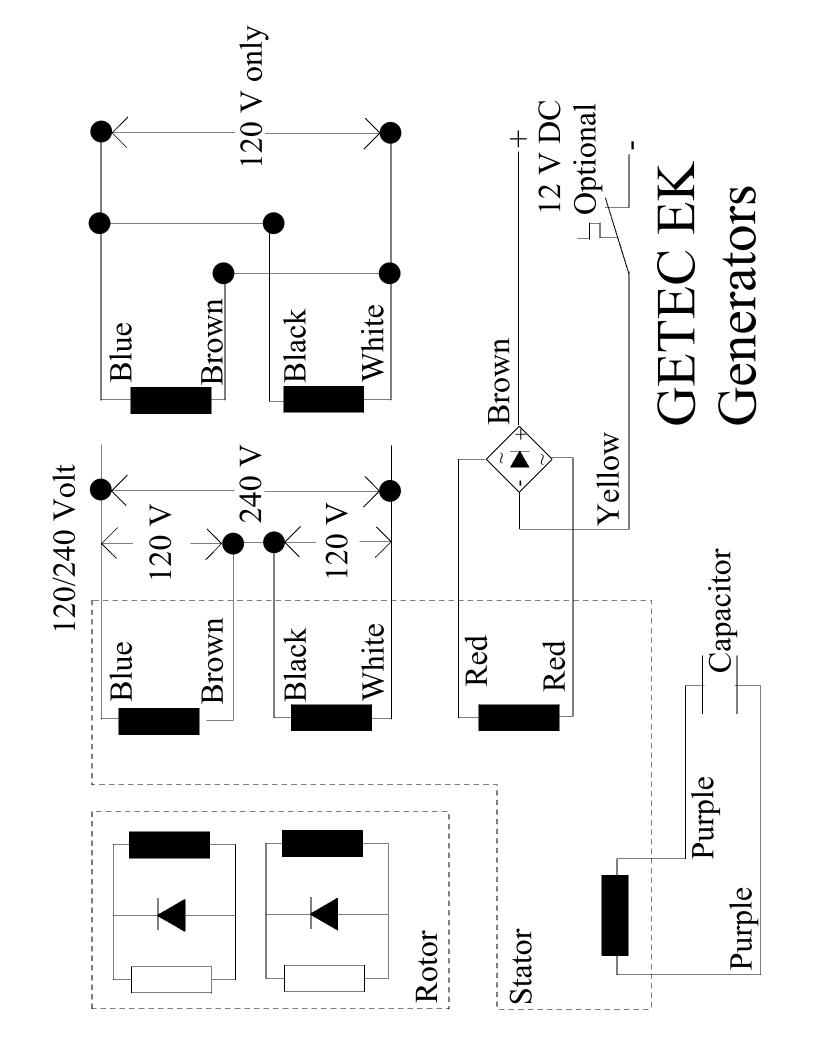





#### Flow Control Adjustment

In some cases, the viscosity of the hydraulic fluid used by the customer is different from the fluid we use in our test stand (ATF). A readjustment of the flow control may be necessary. A frequency meter or tachometer is needed to check the proper RPM.

No load speed should be 3720 RPM or 62 Hertz. Full load speed should be 3600 RPM or 60 Hertz.

The flow control will not compensate for low flow of hydraulic fluid.

Connect a frequency meter or tachometer to the generator.

Start your hydraulic system at a slow speed, engage generator slowly, and increase the flow to the generator while monitoring the speed. After you reached the proper flow, the generator should be turning at a speed of 3720 RPM. Slowly keep increasing the flow, the generator should stay at 3720 RPM. If the speed of the generator increases, adjust the speed setting on the end of the flow regulator counter clockwise, setting the maximum speed at 3750 RPM. If you cannot adjust the speed, re-check your pressure and return line connection. Reverse hookup will disconnect flow regulation and will cause extreme damage to generator.

Do **NOT** make any flow control adjustments while you have a load connected to the generator.

Telephone: (845)-292-0800

FAX # : (845)-292-0830



Model	
-------	--


#### **IMPORTANT**

This hydraulically-driven generator requires that the hydraulic system is able to deliver


\_GPM up to \_PSI to the generator drive.

Otherwise the generator cannot produce its rated output.

Contract W. I. D.

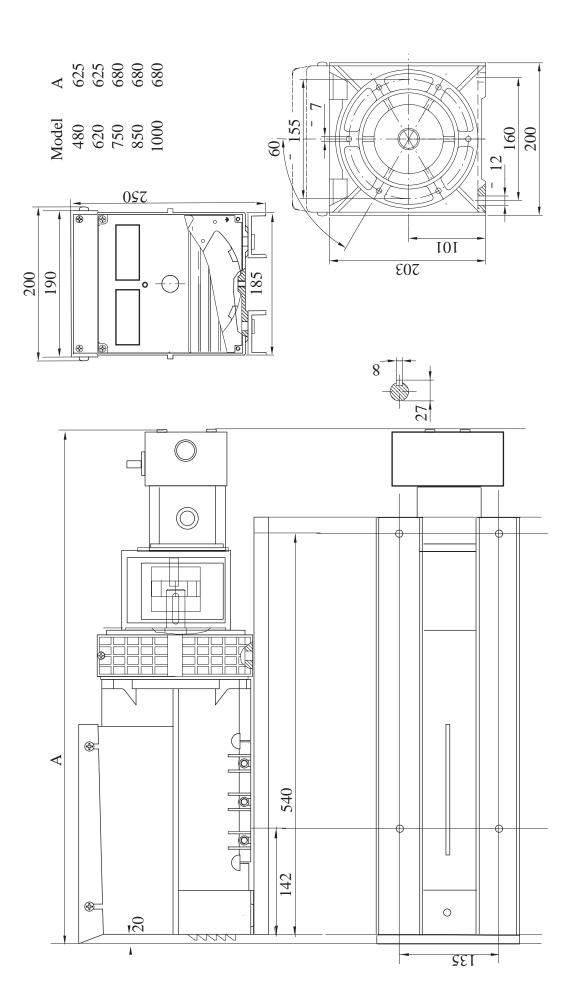

### HYDROMAX DIMENSIONS O Nodels

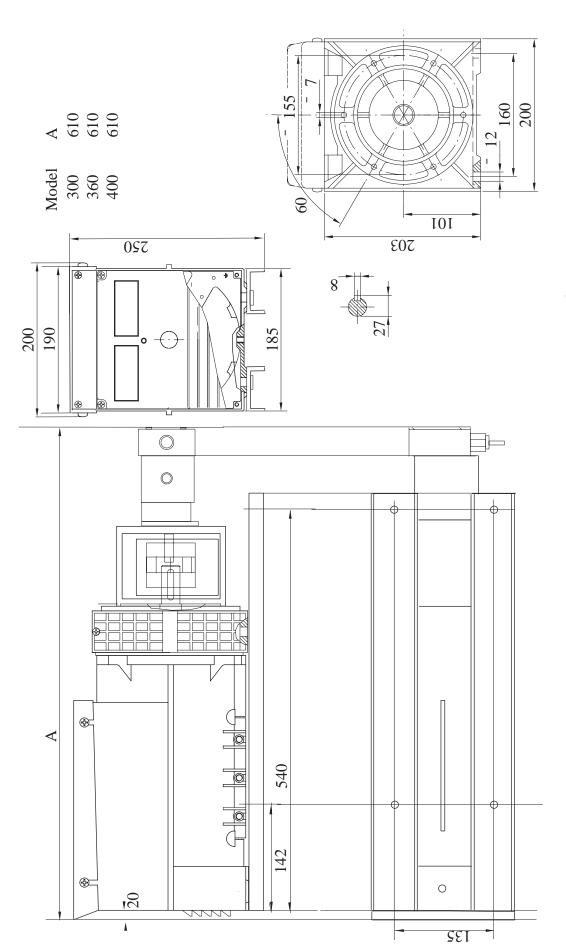

### HYDROMAX DIMENSIONS 0 Models



#### **GETEC Product Line**

### Hydraulically Driven AC Generators 3000 Watt to 34000 Watt

Hydraulically Driven Welder-Generators 200 Amp to 400 Amp

Vehicle Jump Starters Hydraulically Driven 650 Amp and 1000 Amp

### Magnet Generators w. Controllers 6 KW to 34 KVA

Catag's Wah Paga